


KitchenAid® TOP AND CABINET PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

AUTOMATIC
WASHER

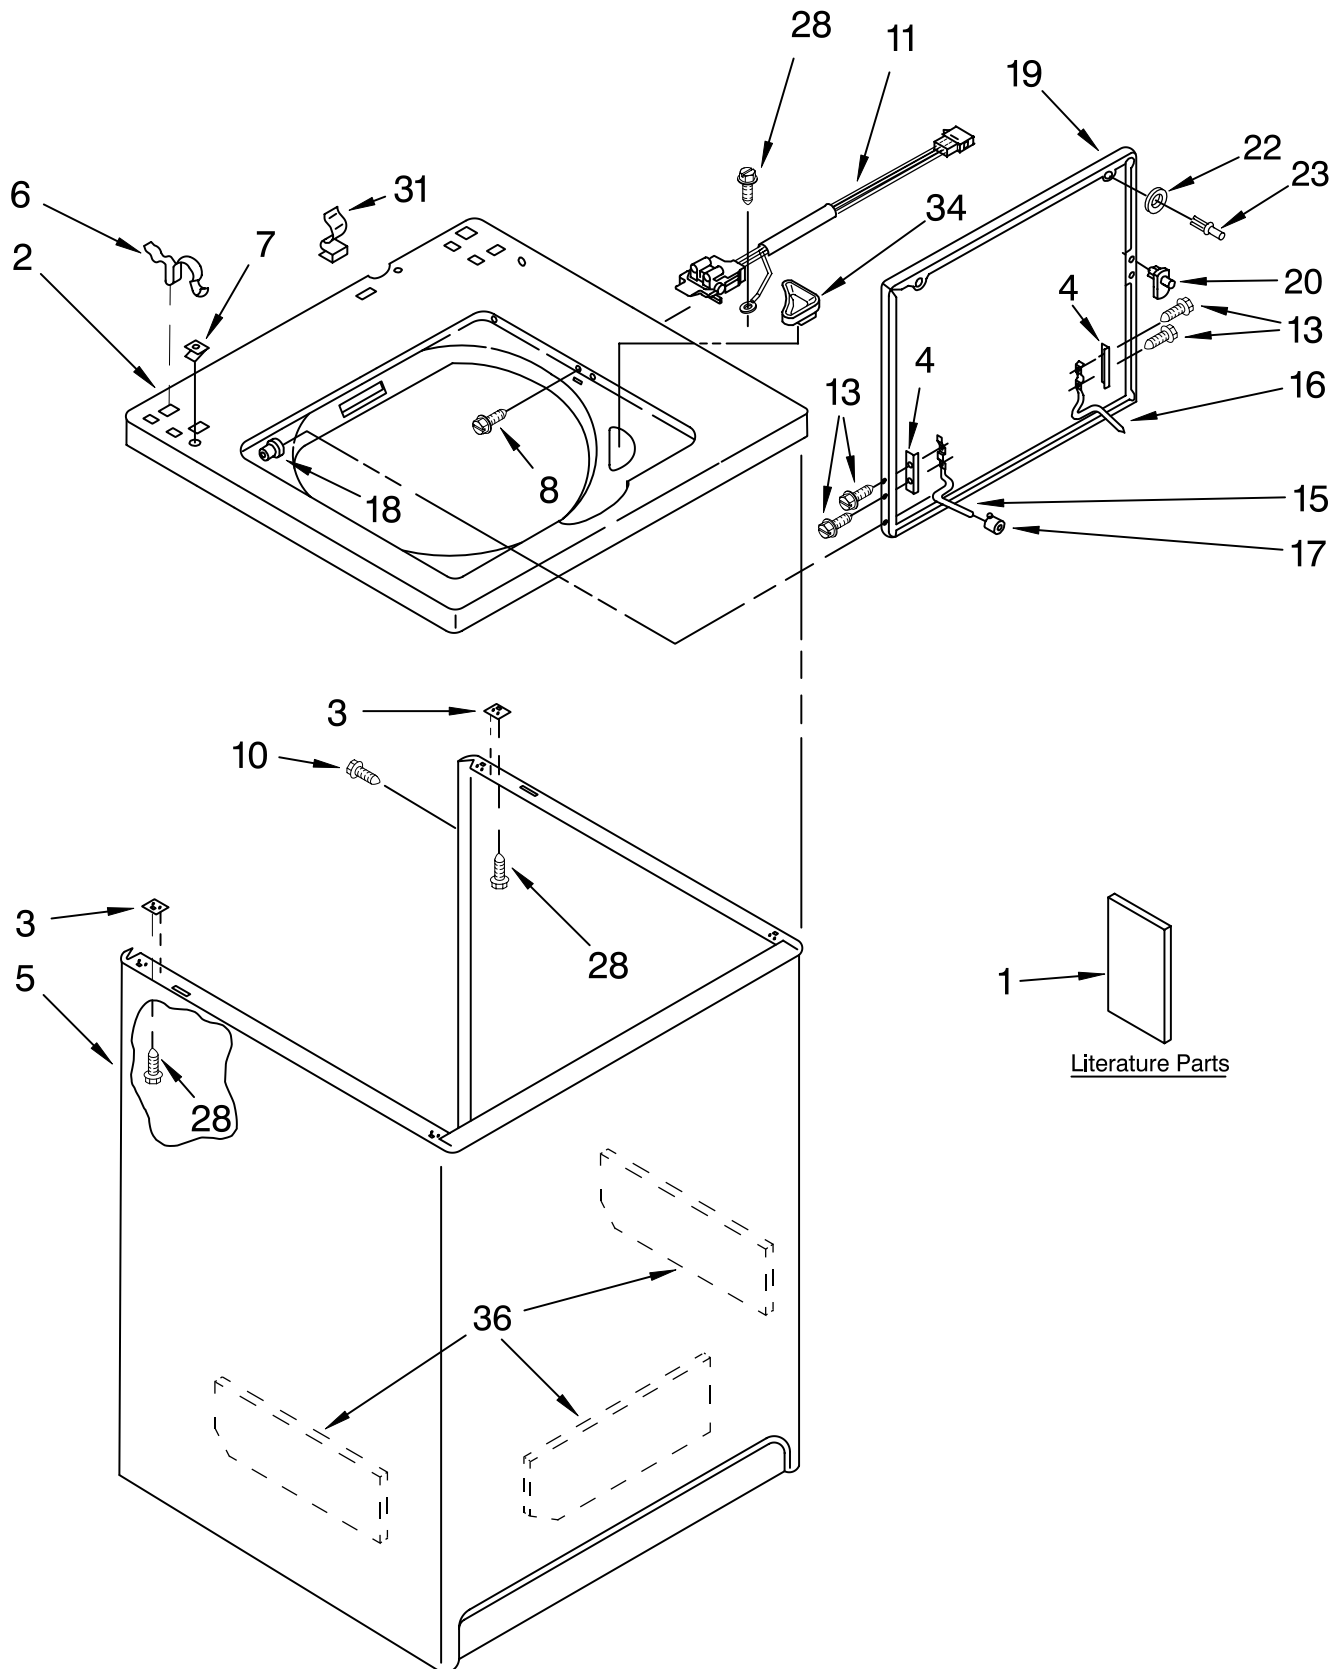

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CABINET PARTS


For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	LIT3951188	Literature Parts Installation Instructions Use & Care Guide
	LIT3950453	English
	LIT3951069	French
	LIT3954862	Energy Guide
	LIT3955180	Wiring Diagram
2	8271383	Top White
	8271385	Biscuit
3	62750	Spacer, Cabinet To Top (4)
4	21097	Pad, Hinge
5	63424	Cabinet White
	3954357	Biscuit
6	62780	Clip, Top & Cabinet & Rear Panel (2)
7	357213	Nut, Push-In (2)
8	3356311	Screw & Washer, Lid Switch (2)
10	3357011	Screw, 10-16 x1/2
11	3949237	Switch, Lid
13	3351355	Screw, Lid Hinge Mounting (4)
15	54584	Hinge, Lid (L.H.)
16	91770	Hinge, Lid (R.H.)
17	19119	Bumper, Lid Hinge
18	21258	Bearing, Lid Hinge (2)
19		Lid
	3362332	White
	3362333	Biscuit
20	358684	Strike, Lid Switch
22	3360787	Bumper, Lid
23	356907	Rivet, Plastic
28	3390631	Screw, 10-16 x 3/8 (5)
31	90016	Clip, Harness
34	3362952	Dispenser, Bleach
36	3349654	Sound-Damper (Cabinet)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REAR PANEL PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

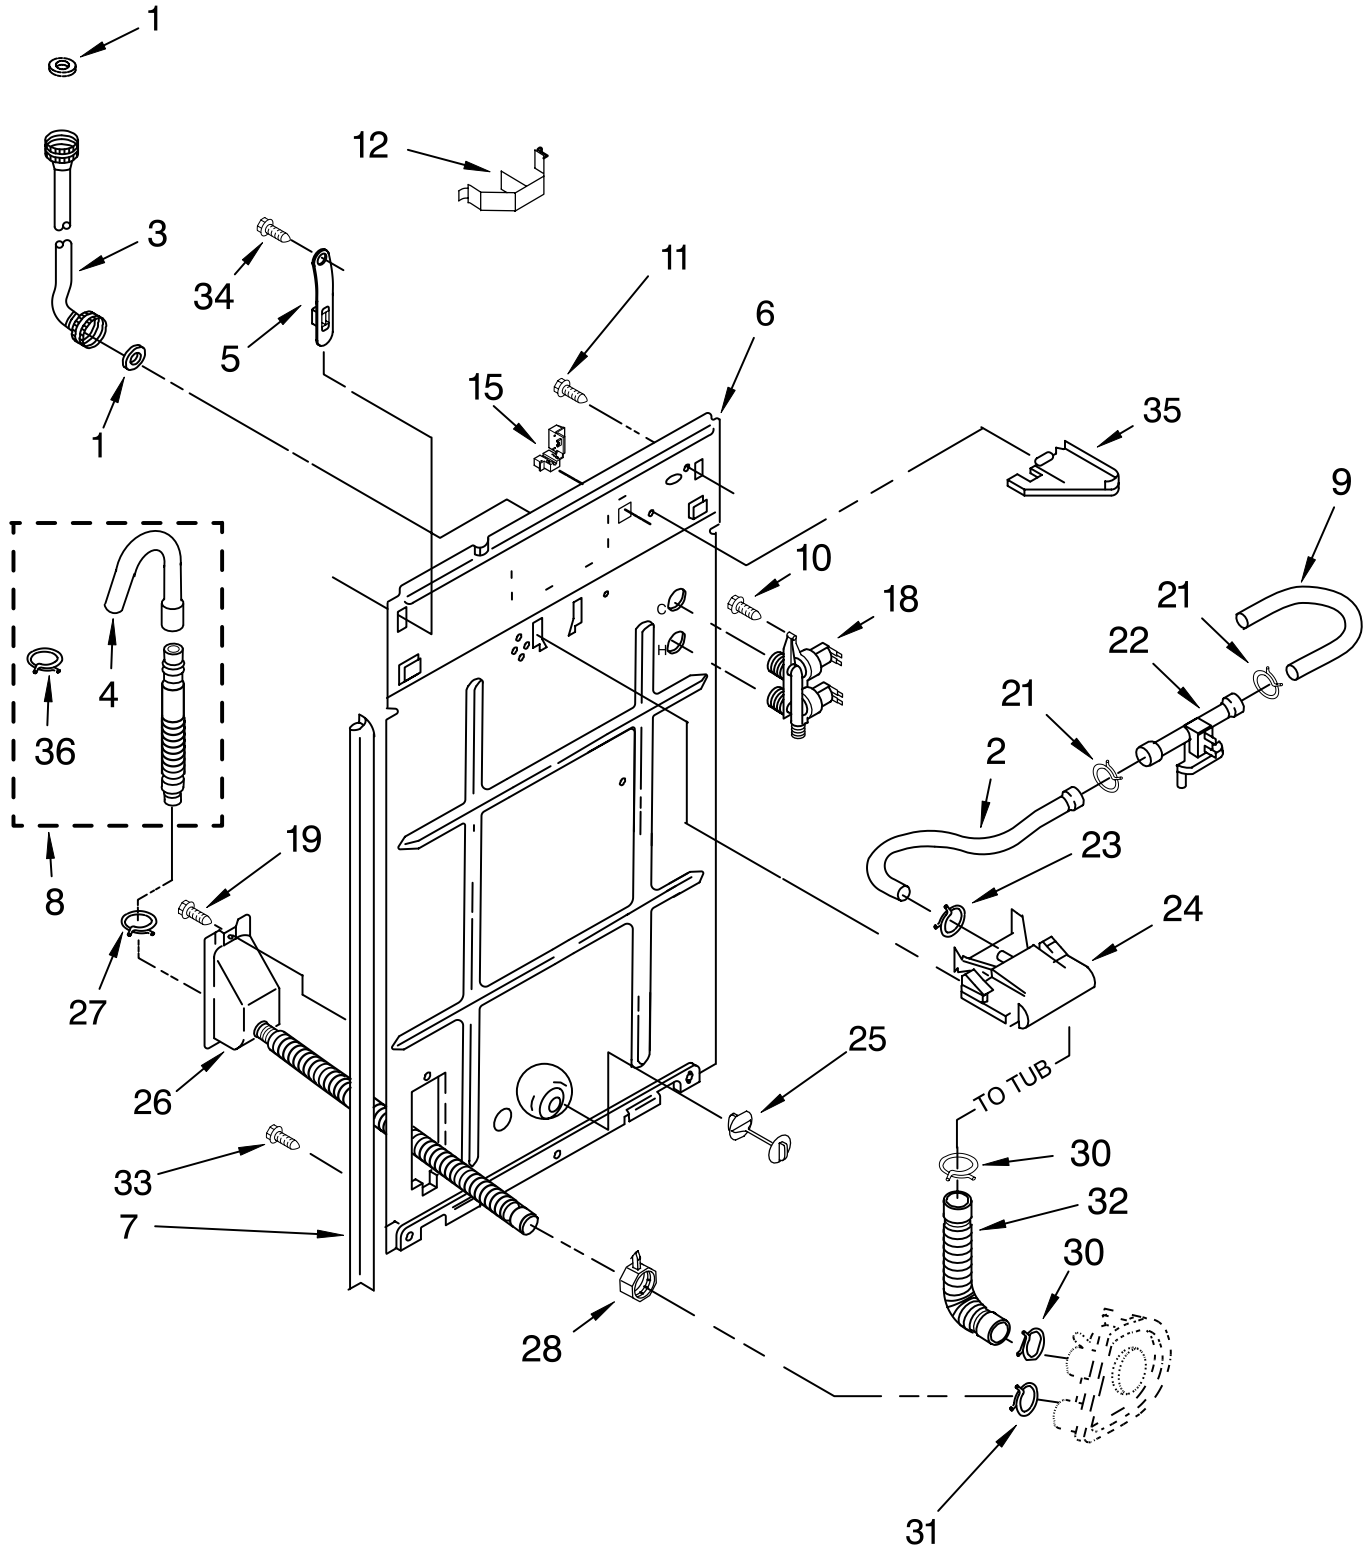

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REAR PANEL PARTS


For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	3976300	Washer, Water Inlet Hose (4) (1-1/16 x 5/8)
2	3349365	Hose, Sensor Upper
3		Hose, Water Inlet
	3949374	Blue Coupler
	3949375	Red Coupler
4	3357027	Nozzle, Drain Hose
5	8318255	Strap, Console (2)
6	3357978	Panel, Rear
7	62747	Pad, Rear Panel
8	3951609	Hose, Drain (4 ft.)
	661577	Hose, Drain (9 ft.) (Not Included)
	3357090	Extension, Drain Hose (21 Inches) (Not Included.)
9	3357319	Hose, Vacuum Break
10	9740848	Screw
11	3351614	Screw
12	8055003	Clip, Harness & Pressure Hose
15	3952821	Strain Relief, Power Cord
18	3952164	Valve, Water Mixing
19	90864	Screw, 10-24 x 1/2
21	370451	Clamp, Hose
22	3352282	Sensor, ETC-Inline
23	371503	Clamp, Hose
24	387606	Break, Vacuum
25	8519200	Support, Rear Panel
26	8317941	Drain Hose Assembly
27	356138	Clamp, Hose
28	3976395	Clamp, Hose
30	3363366	Clamp, Hose
31	371507	Clamp, Hose
32	3951449	Hose, Pump To Tub
33	62863	Screw, 10-16 x 3/8
34	3390647	Screw, 8-18 x 1/2
35	3348424	Shield, Suds
36	3366913	Clamp, Drain Hose

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

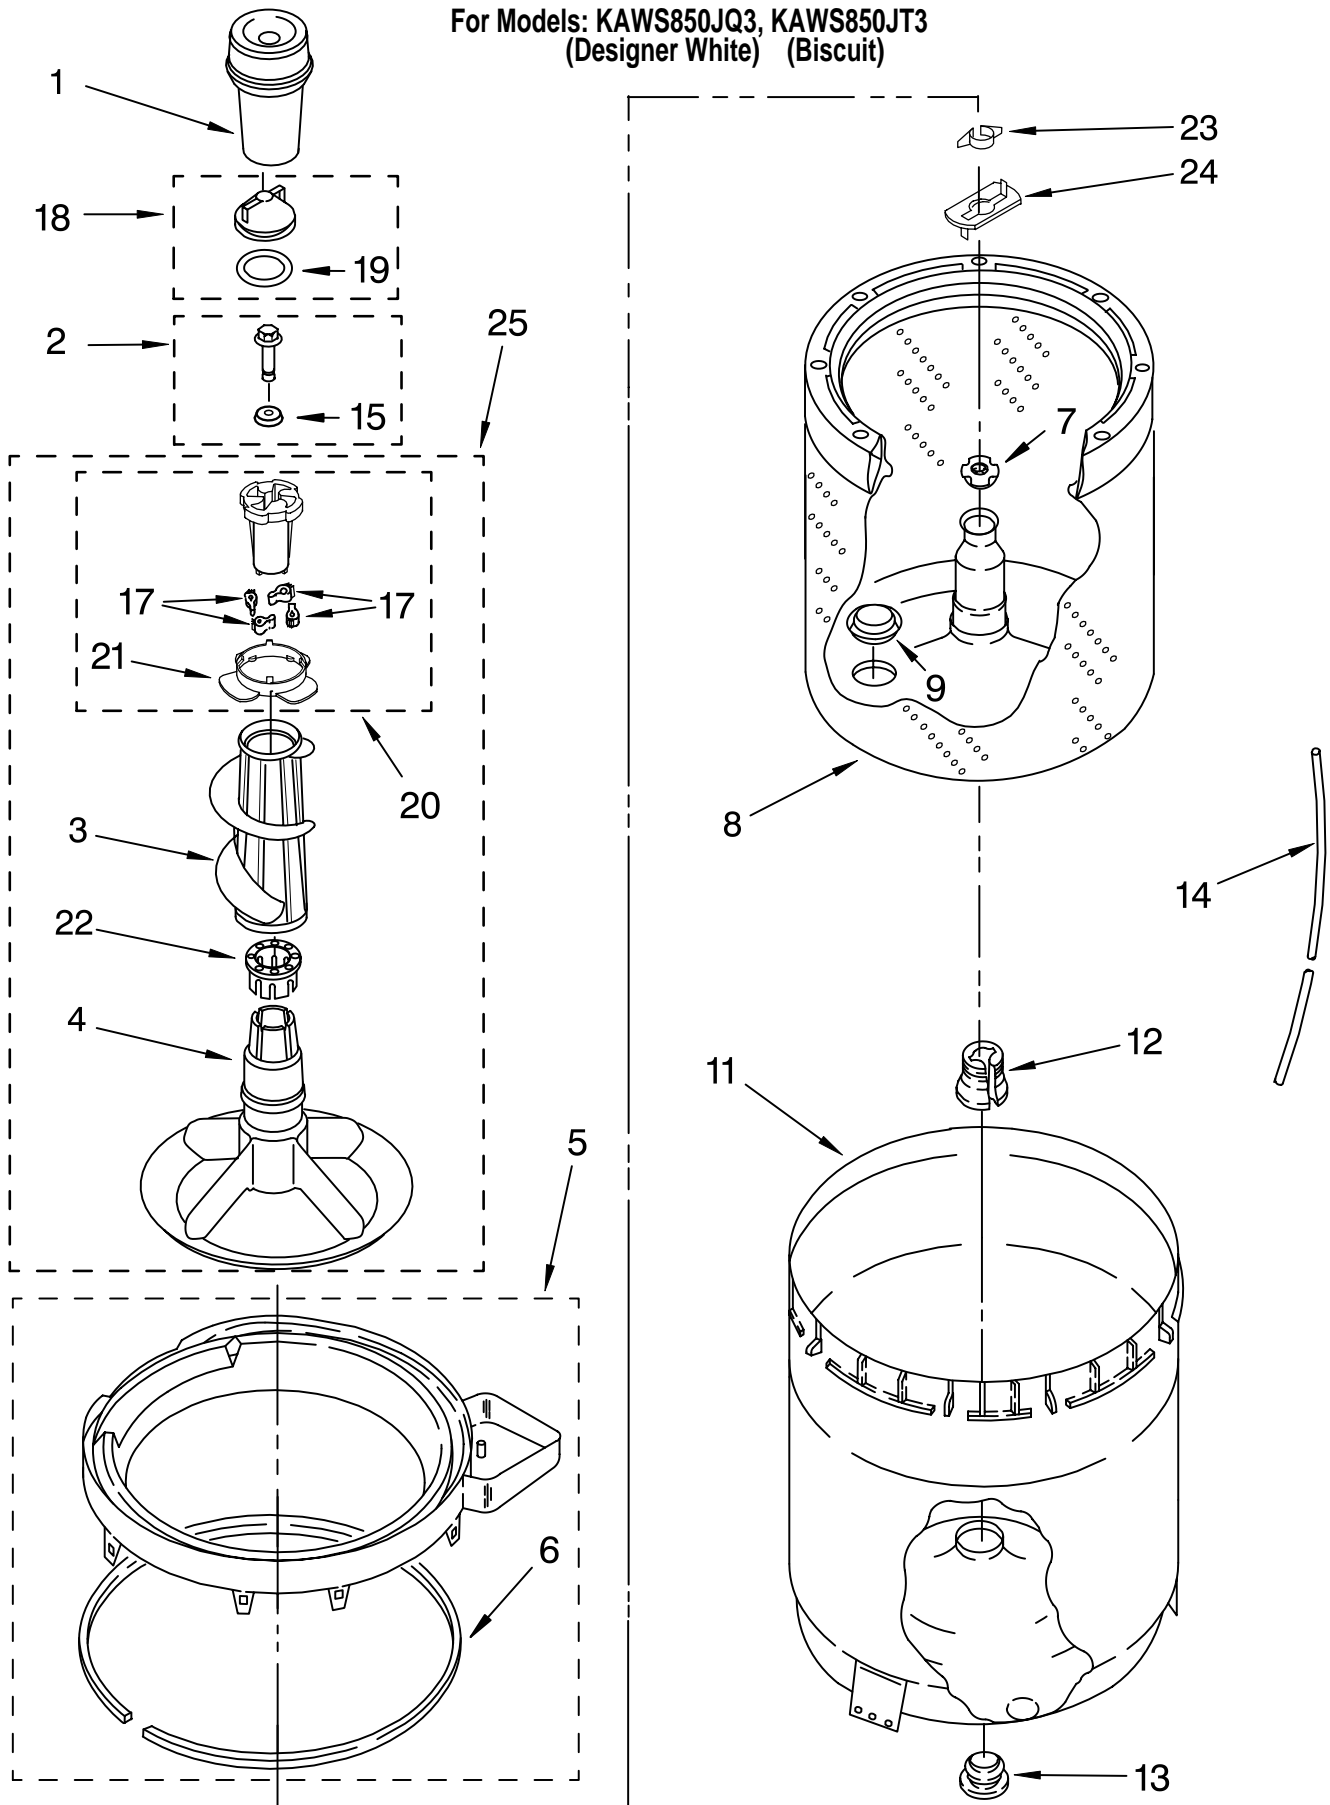

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

AGITATOR, BASKET AND TUB PARTS


For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	63580	Dispenser, Rinse
2	358237	Screw & Washer (5/16-24 x 1)
3	3950581	Clothes Mover
4	3950580	Agitator
5	63851	Tub Ring
6	3359585	Gasket, Tub Ring
7	21366	Nut, Spanner
8	3951983	Basket & Balance Ring (Also Order # 9)
9	8522271	Filter Plug
11	63849	Tub
12	389140	Block, Basket Drive
13	383727	Gasket, Centerpost
14	3347780	Hose, Pressure Switch
15	3949550	Washer
17	3366877	Dog, Agitator Clutch (4)
18	3354733	Cap, Barrier
19	3348855	Seal, Inner Auger
20	3363663	Cam-Driven
21	3363661	Bearing-Driven Cam
22	3350389	Spacer, Thrust
23	3354845	Clip, Agitator
24	3355921	Washer, Agitator
25	3950579	Agitator (Complete)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

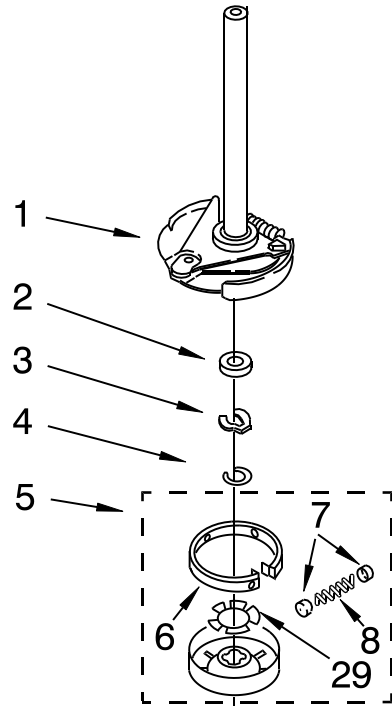

Illus. No.	Part No.	DESCRIPTION
1	388952	Brake & Drive Tube (Complete) (Refer to Page 12 For Further Breakdown)
2	63292	Washer, Spin Tube Thrust
3	62697	Ring, Spin Tube Support
4	63283	Ring, Retainer
5	3951311	Clutch (Complete)
6	3951308	Band & Lining, Clutch (Includes Illus. 7 & 8)
7	62646	Cap, Clutch Spring (2)
8	3946792	Spring, Clutch
9	3360630	Gearcase (Complete) (Refer to Page 11 For Further Breakdown)
10	3357334	Screw, Gearcase To Base (3)


Illus. No.	Part No.	DESCRIPTION
11	62611	Plate, Motor Mount To Gearcase
12	62691	Grommet, Motor (4)
13	285753	Coupling, Motor And Isolation
14	3946532	Shield, Motor
16	3400516	Screw
17	3349637	Retainer, Motor (2)
18	3362089	Shield, Tub To Motor
19	3350418	Motor, Main Drive
20	62850	Switch, Main Drive Motor
21	62700	Retainer, Pump (2)
22	3363892	Pump (Complete)
23	3949170	Capacitor, Motor Start
24	357030	Clamp, Capacitor
25	62863	Screw, Capacitor Mounting
28	3387485	Screw (2) 10-16 x 5/8
29	3355454	Clip, Anti-Rattle

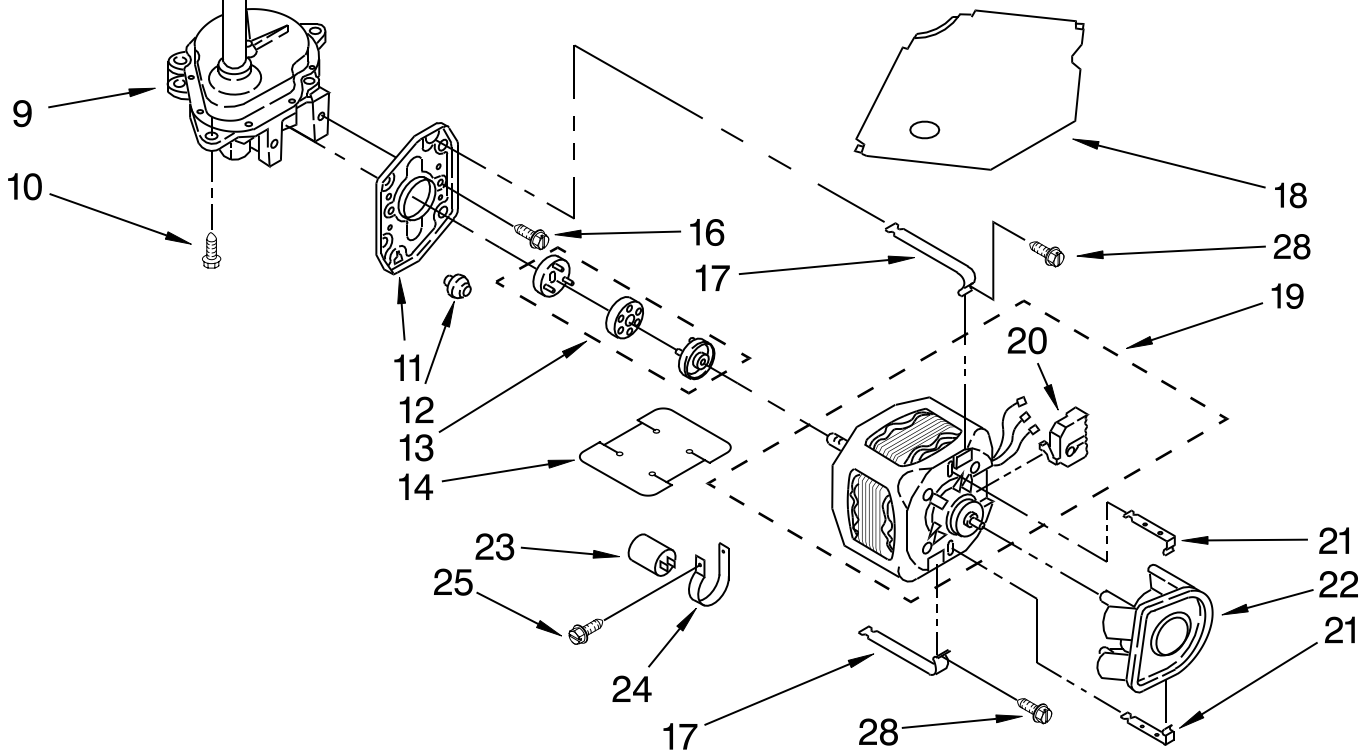

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MACHINE BASE PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

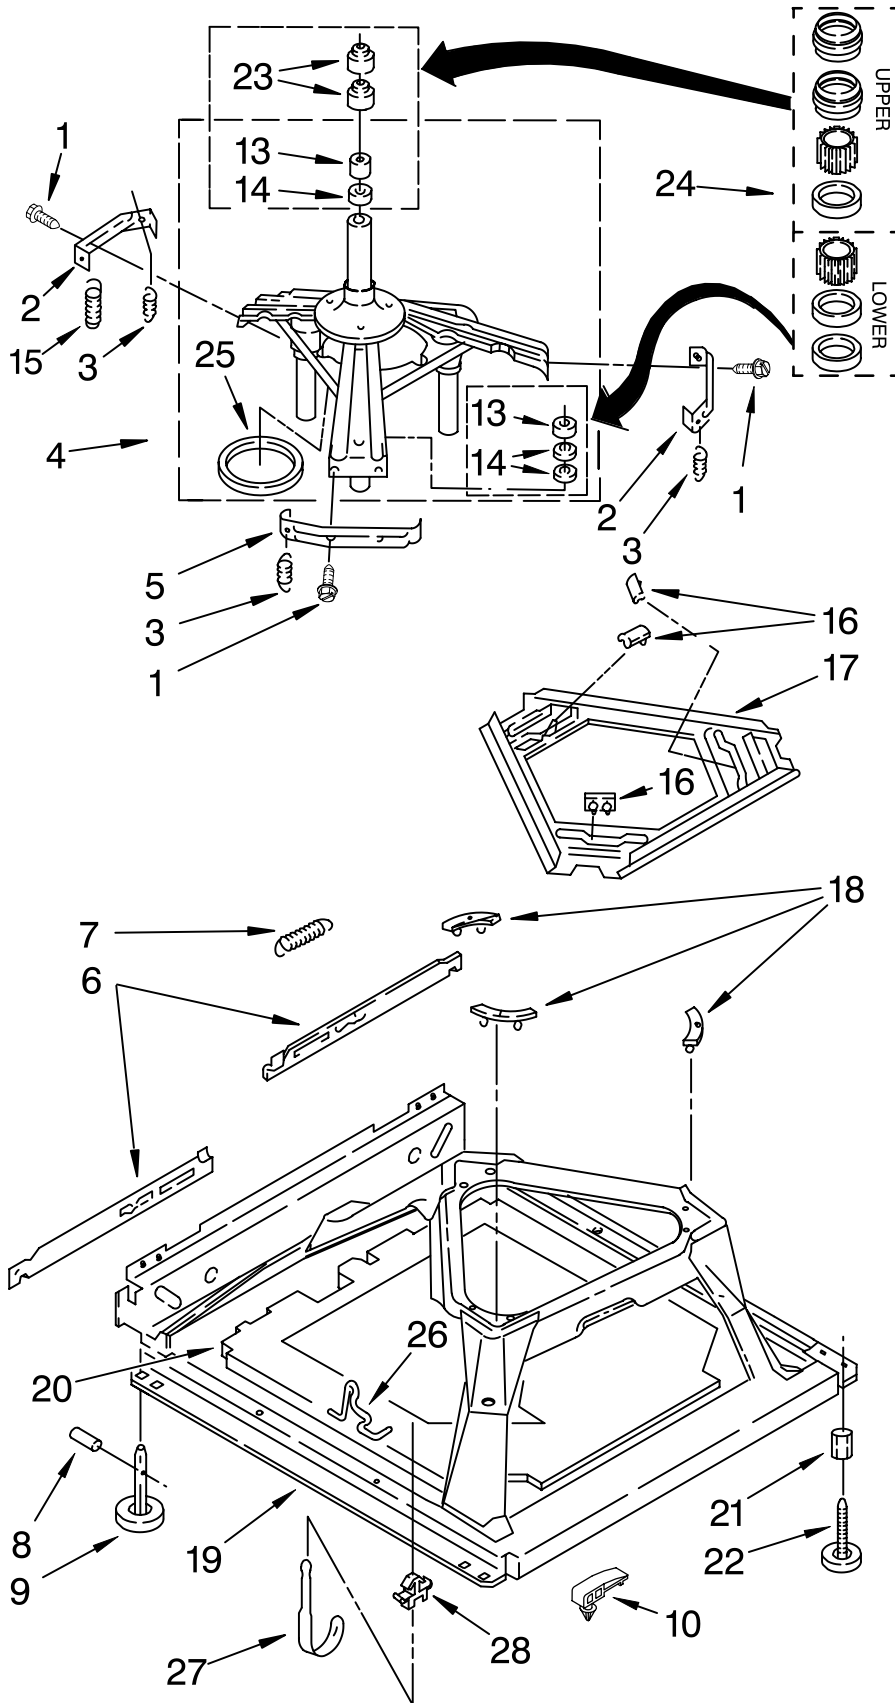


Illus. No.	Part No.	DESCRIPTION
1	3400076	Screw, Bracket Mounting (10-32 x 5/8)
2	64067	Bracket, Spring Outer (2)
3	63907	Spring, Suspension (3)
4	3362087	Support & Brake, Tub
5	64065	Bracket, Spring Outer (L.F.)
6	63466	Link, Leveling Mechanism (2)
7	62597	Spring, Leveling Mechanism
8	62837	Pin, Knurled
9	62596	Foot, Rear (2) 10-16 x 3/8 (2)
10	3976276	Clip, Sound Board
13	3347047	Bearing, Centerpost (2)
14	357409	Seal, Centerpost (3)
15	388492	Spring, Counterweight
16	62568	Pad, Plate
17	3946509	Plate, Suspension (Includes Illus. 16)
18	3363660	Pad, Base
19	3946512	Base Assembly (Includes Illus. 6, 7, 8, 9, 18 & 26)
20	8283230	Sound, Absorber
21	3359452	Nut, Lock (3/8-16)
22	389102	Foot, Front (2)
23	356934	Seal, Centerpost (2)
24	285203	Centerpost Bearing Kit (Includes Illus. 13, 14 & 23)
25	63134	Ring, Sound Deadening
26	63806	Retainer, Suspension Spring
27	3350281	Hanger-Drain Hose
28	3350282	Clip, Snap-In (Drain Hose)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

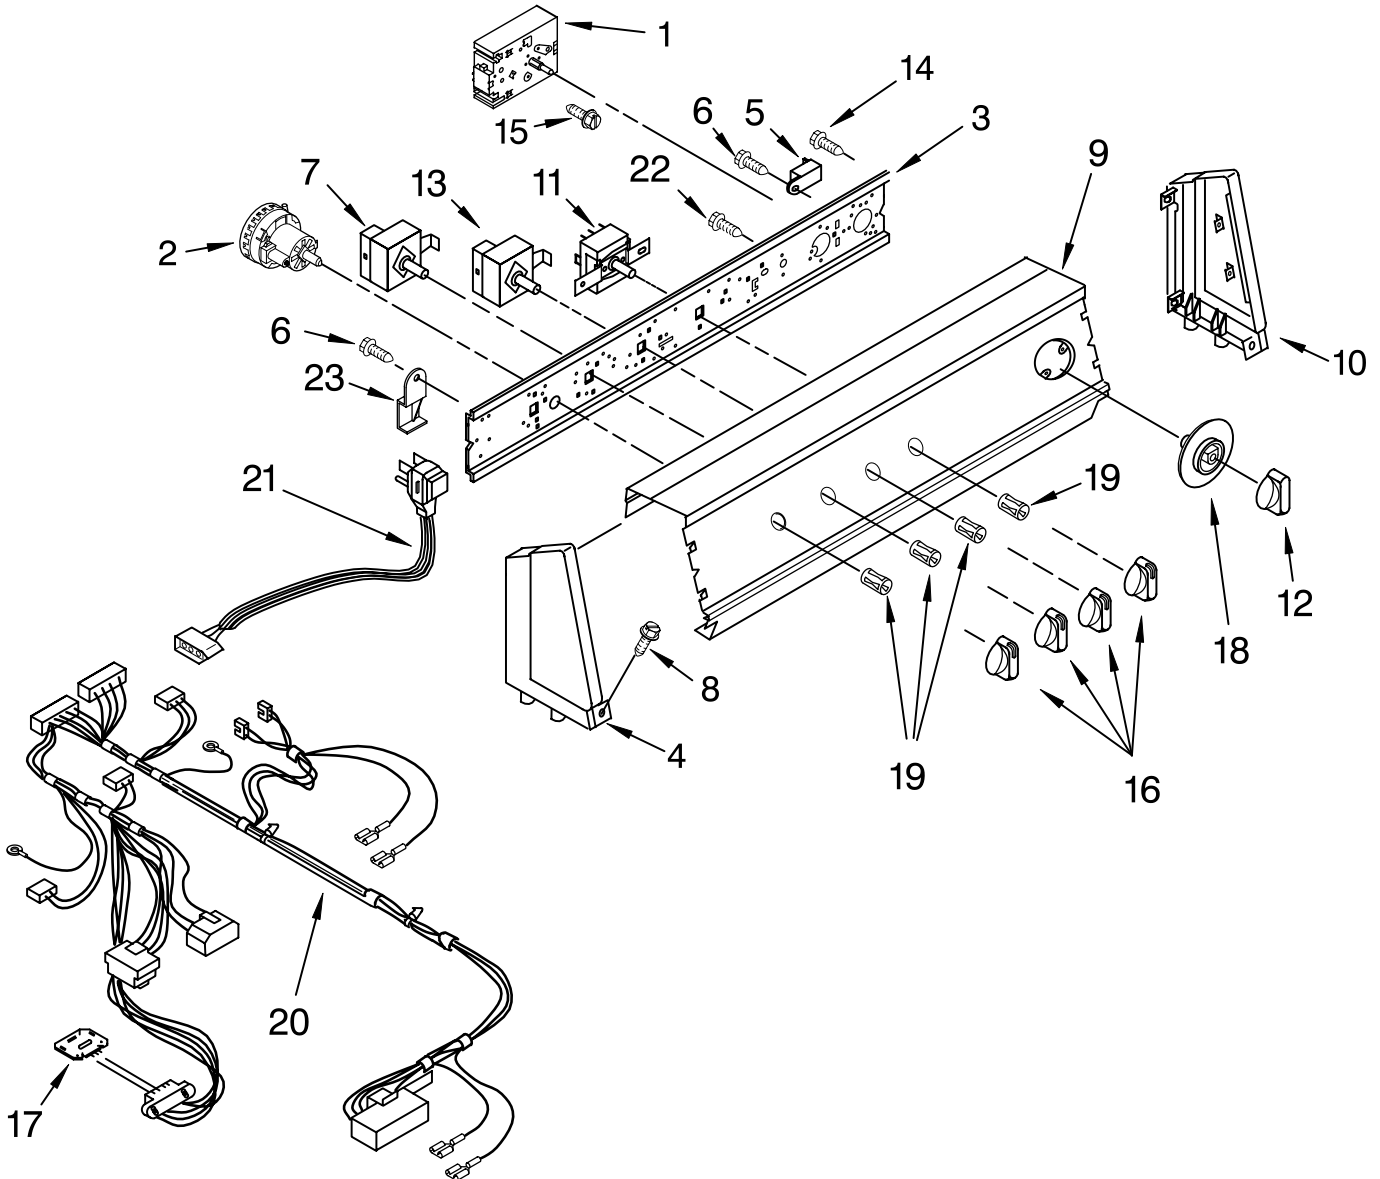

Illus. No.	Part No.	DESCRIPTION
1	3954915	Timer, Control (60 Hz) (Motor Not Serviced)
2	3950420	Switch, Water Level
3	3948608	Bracket, Control
4	8274353	Cap, End (L.H.) White
	8274355	Biscuit
5	694419	Mini, Buzzer
6	90767	Screw 8A x 3/8
7	3950354	Switch, Water Temperature
8	388326	Screw


Illus. No.	Part No.	DESCRIPTION
9	3952546	Panel, Console White
	3952547	Biscuit
10	8274349	Cap, End (R.H.) White
	8274351	Biscuit
11	3952578	Switch, Rotary
12	8529309	Knob, Timer White
	8529310	Biscuit
13	3950356	Switch, Rotary
14	90864	Screw, 10-24 x 1/2
15	3400818	Screw, Timer

Illus. No.	Part No.	DESCRIPTION
16		Knob, Control (Includes #19)
	3949700	White
	3949704	Biscuit
17	3407125	ETC Control
18		Dial, Timer
	8274410	White
	8274411	Biscuit
19	688805	Clip, Knob
20	3955018	Harness, Wire (For Detail See Pages 13 & 14)
21	3948063	Cord, Power
22	3400073	Screw, Ground
23	8283343	Retainer, Harness

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WATER SYSTEM PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

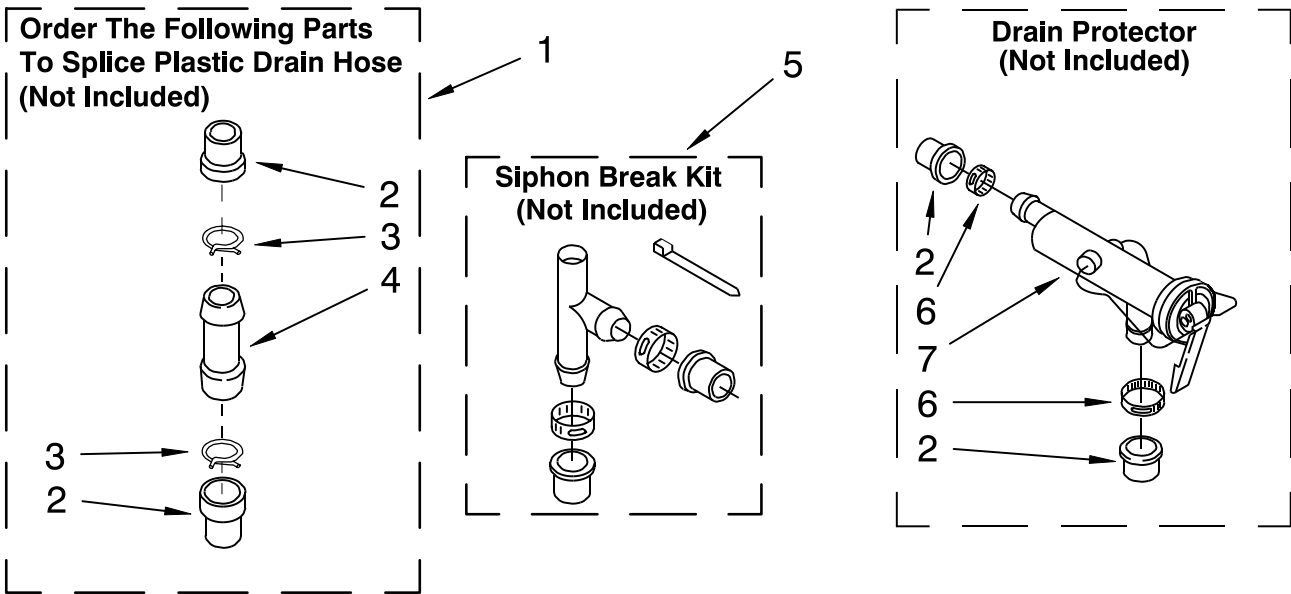


WS400

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit (Not Included)
6	65349	Clamp, Hose
7	367031	Drain Protector (Not Included)

GEARCASE PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

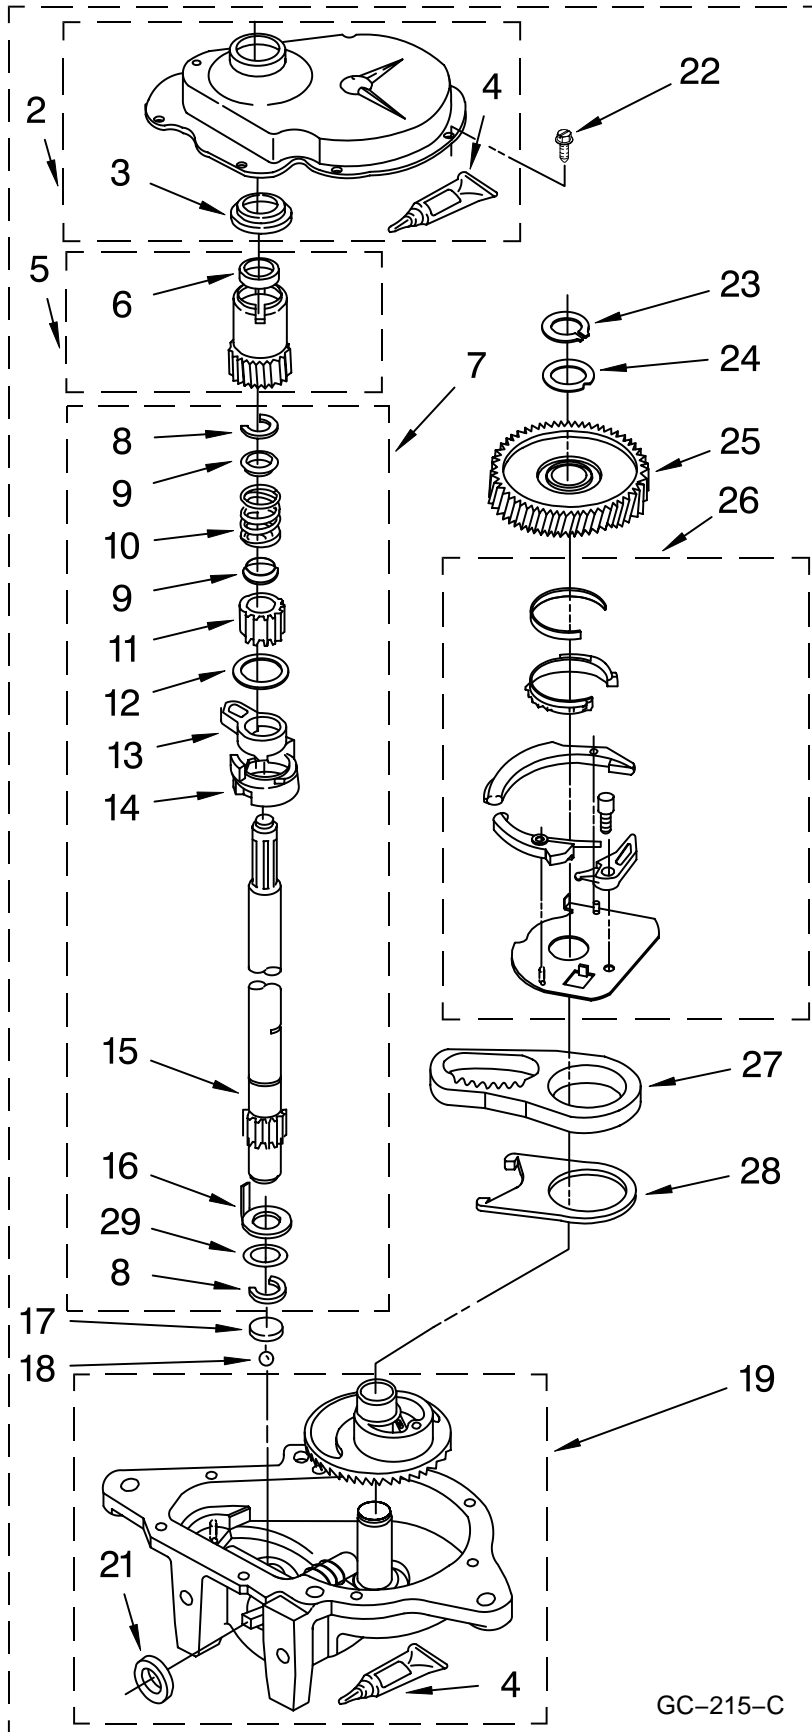


Illus. No.	Part No.	DESCRIPTION
1	3360630	Gearcase (Complete)
2	285202	Cover, Gearcase
3	3349985	Seal, Gearcase Cover
4	285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
5	63320	Pinion, Spin (Includes Illus. 25)
6	356427	Seal, Spin Pinion
7	389387	Shaft, Agitator (Complete)
8	90369	Ring, Retaining (2)
9	62677	Retainer, Spring
10	62676	Spring, Agitate
11	63273	Gear, Agitate (Includes 15 and 29)
12	62619	Washer, Agitate Gear
13	62580	Cam Follower (Includes 14)
14	62581	Cam, Agitate (Includes 13)
15	285509	Shaft, Agitator (Includes 11 and 29)
16	62618	Washer, Cam Thrust
17	16018	Bearing, Thrust
18	85529	Ball, Bearing
19	389230	Bottom and Pinion, Gearcase
21	285352	Seal, Thrust Plug
22	3351614	Screw, Gearcase Cover, Mounting (8) (10-24 x 3/8)
23	3362552	Ring, Retaining
24	285735	Washer Kit, Thrust
25	62570	Gear, Spin
26	388253	Neutral Assembly
27	3349296	Rack, Connecting
28	62621	Actuator, Shift
29	388815	Washer, Intermediate

GC-215-C

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BRAKE AND DRIVE TUBE PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

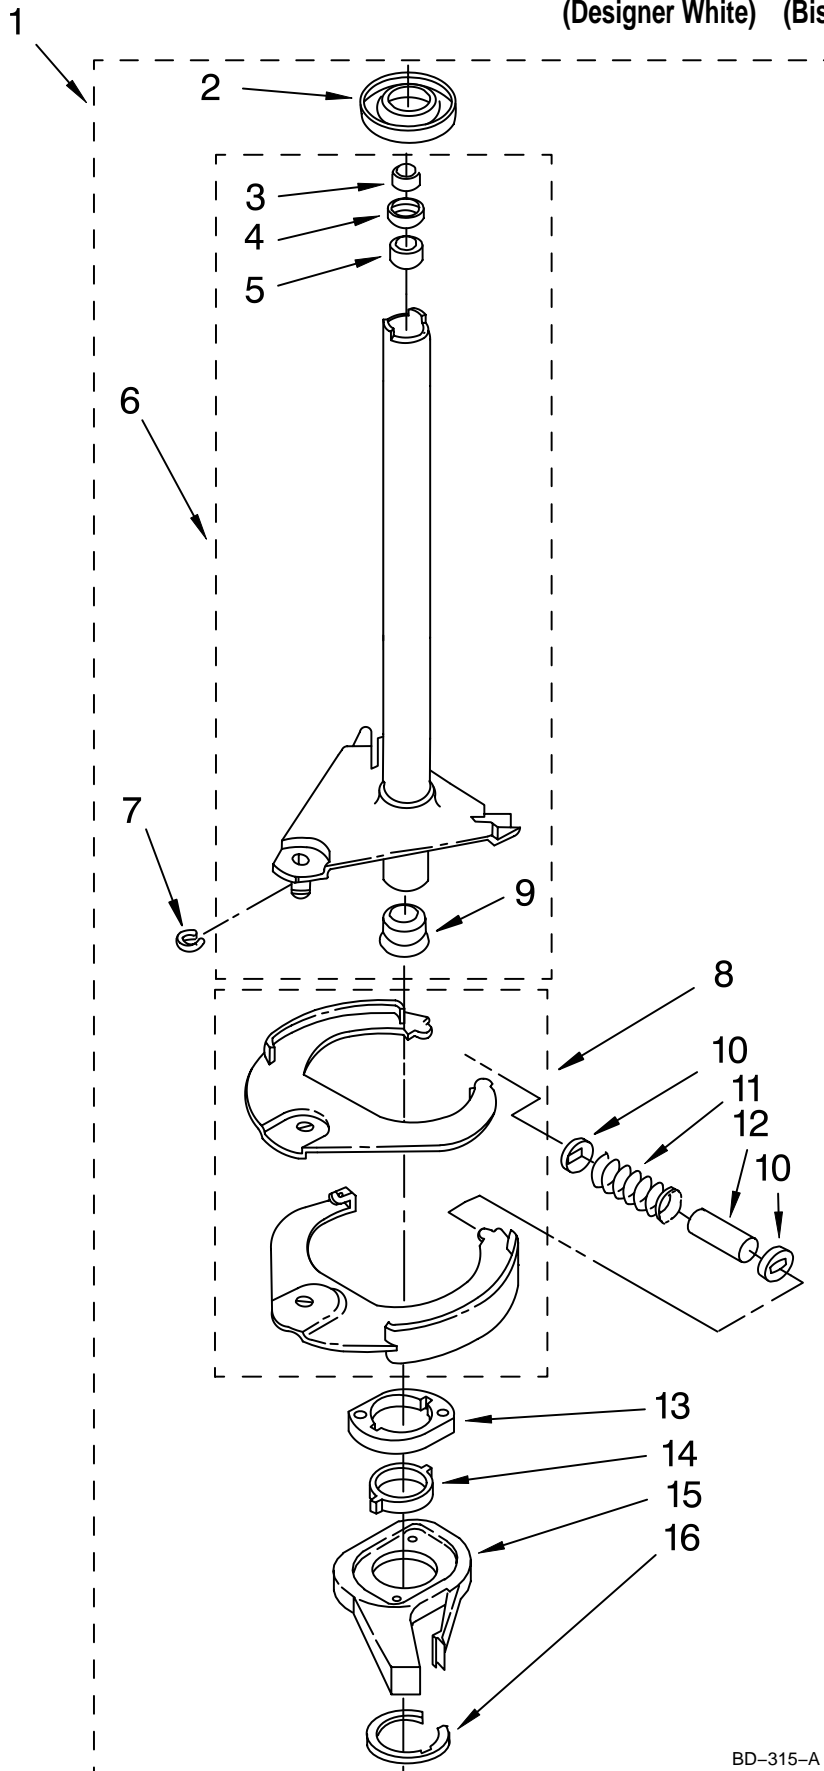

Illus. No.	Part No.	DESCRIPTION
1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Shoe, Brake
9	62703	"T" Bearing, Spin Tube
10	62648	Cap, Brake Spring (2)
11	387806	Spring, Brake
12	62909	Sleeve, Brake Spring
13	63023	Cam, Brake Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake Cam
16	90368	Ring, Retaining

FOLLOWING PARTS NOT ILLUSTRATED


285208 Lubricant
(Use Only In Brake Shoe Assembly On Roller & Pin)

BD-315-A

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

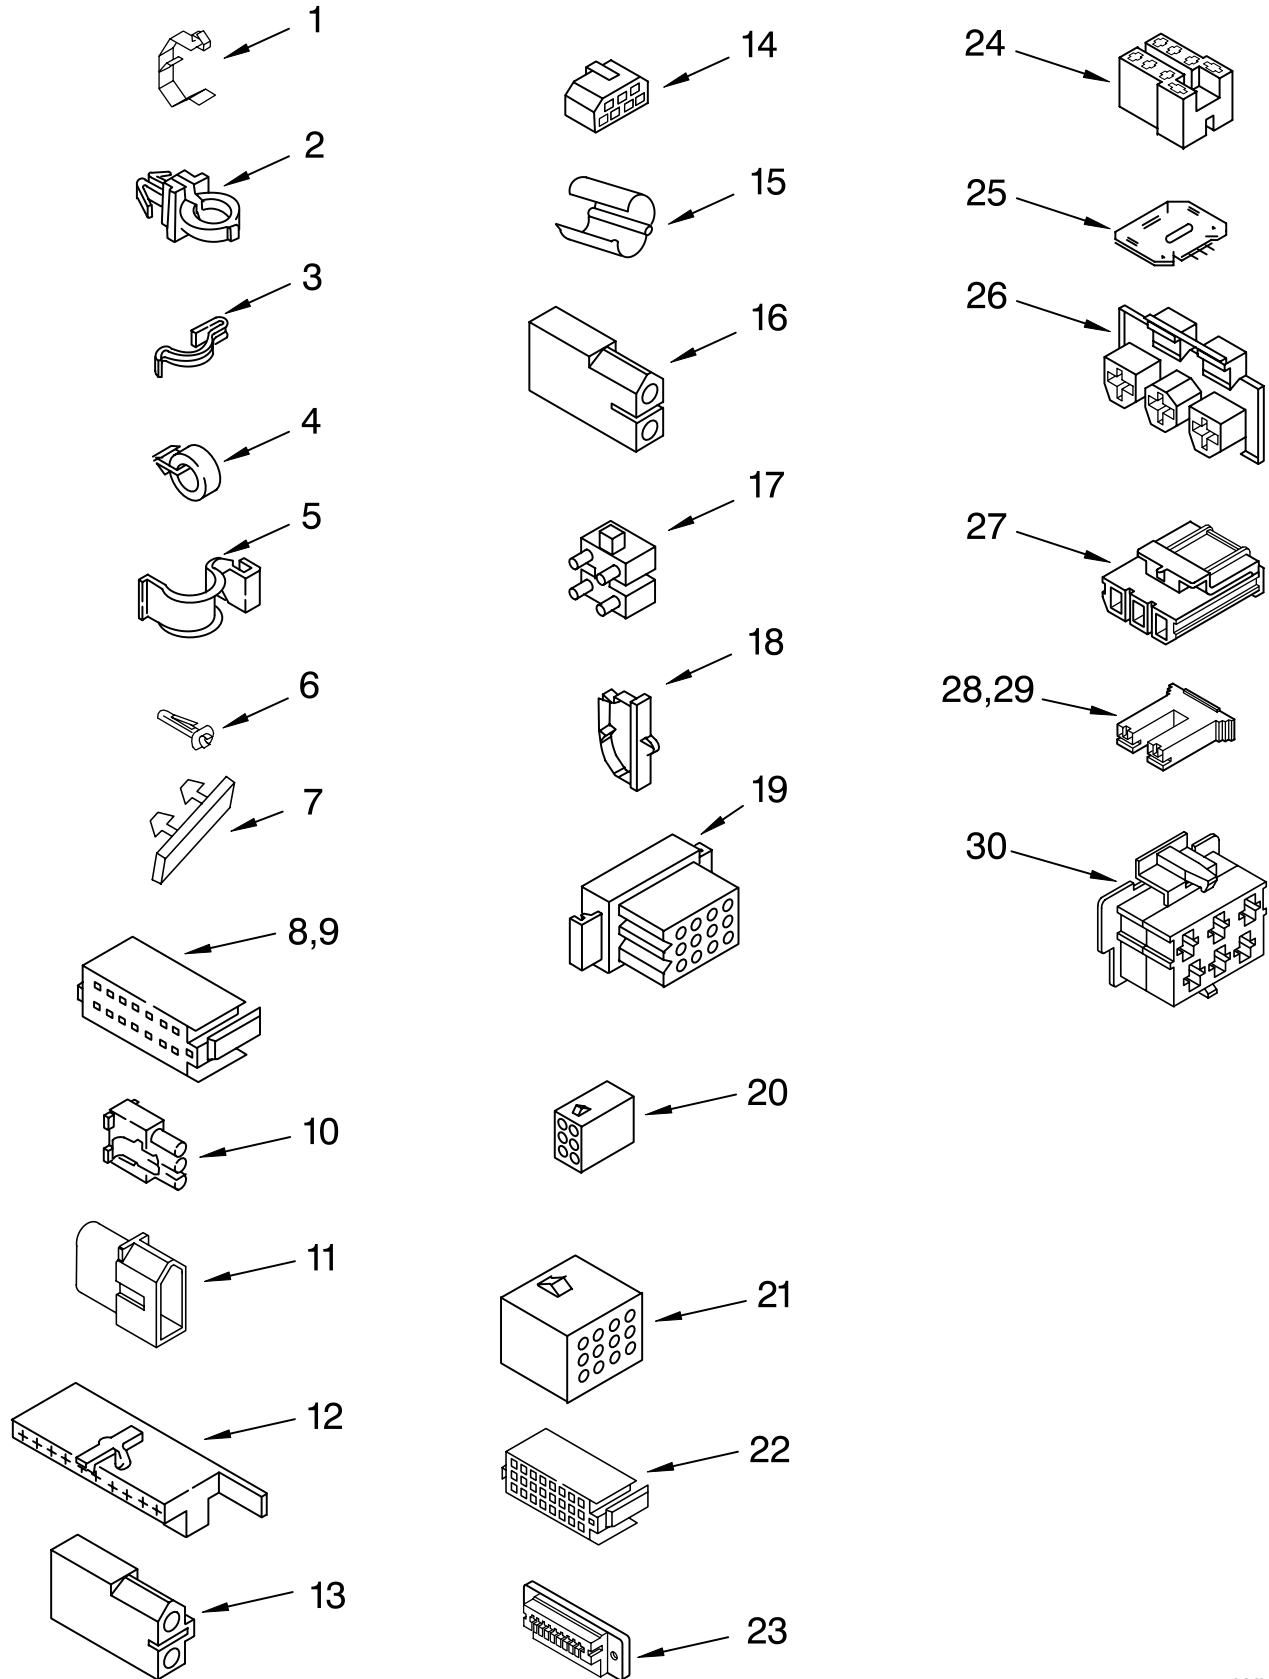

WH2G

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

WIRING HARNESS PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3349557	Clip, Harness	13	3348075	Block, Disconnect (Motor 3 Speed) (Use Term. 94613 Or 94614.)	23	3349494	Connector, Etc
2	388498	Clip, Harness				24	60687	Connector, Relay (Use Term.308569)
3	3347812	Clip, Harness				25	3407125	E.T.C. Control
4	3352501	Clip, Harness	14	3347243	Block, Disconnect (Use Term. 352088)	26	3948617	Connector (T.P.A.) (3-Circuit) (Lid Switch) (Use Term. 3948619 OR 3948620.)
5	90016	Clip, Harness	15	63523	Protector			
6	3390496	Clip, Harness	16	717252	Connector (2-Way) (Use Term.94614)	27	3360056	Connector (T.P.A.) (3-Circuit) (Pressure Switch) (Use Term.3948619 OR 3948620.)
7	389379	Retainer, (Suds Models)						
8	352090	Timer, Block Disconnect (White)	17	387566	Plug, Terminal (4-Way) (Power Cord) (Use M3 Screws)	28	3354925	Block, Connector (Cold Valve) (Use Term.693217)
9	352089	Timer, Block Disconnect (Black)	18	3352944	Clip, Harness	29	3354926	Block, Connector (Hot Valve) (Use Term.693217)
10	62889	Receptacle, Terminal (3-Way) (Lid Switch) (Use Term.94613) Or 94614.)	19	3390423	Block, Disconnect (12-Way) (Timer) (Use Term. 94613)	30	3948615	Connector (T.P.A.) (6-Circuit) (Temp. Switch) (Use Term.3948619 OR 3948620.)
11	353424	Plug, Terminal (3-Way) (Power Cord) (Use Term.94613)	20	3347730	Receptacle (6-Way) (Use Term. 94613)			
12	62505	Block, Disconnect (Motor 2 Speed) (Use Term.352088)	21	388818	Plug, Terminal (12-Way) (Use Term. 94613 Or 94614.)			
			22	3369366	Timer, Block Disconnect (Black) (Amp) (Use Term.3369365)			


**FOR COMPLETE WIRING HARNESS REFER TO
CONTROL AND REAR PANEL PARTS PAGE**

WH2G

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models: KAWS850JQ3, KAWS850JT3
(Designer White) (Biscuit)

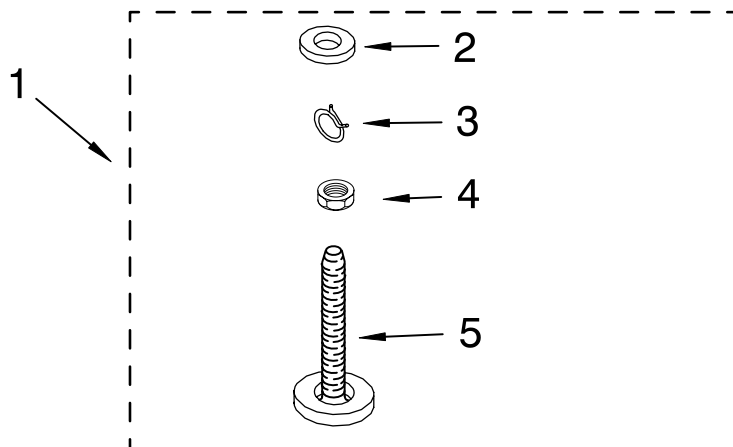

Illus. No.	Part No.	DESCRIPTION
1	3976263	Miscellaneous Parts Bag
2	3976300	Washer, Inlet Hose (1-1/16 x 5/8) (4)
3	3366912	Clamp, Hose
4	3359452	Nut, Lock (3/8-16)
5	389102	Foot, Front (2)

OPTIONAL PARTS (NOT INCLUDED)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

PAINT, TOUCH-UP (1/2oz.)

72017 White
4392899 Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350938 Primer, Gray
350930 White
4392901 Biscuit

PAINT, BULK (1 qt.)

799344 White (Uncut)
4392900 Biscuit (Uncut)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

OIL

350572 Oil, Gearcase (16 Oz.)

LUBRICANT

285208 Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)

SEALER

285195 Sealer, Gasket (.20 Fl. Oz.) (6 ml)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

SHIPPING KIT

3348675 Shipping Kit

COUPLING

384496 Coupling, Hose

ACCESSORY PARTS

367031 Drain Protector
285320 Siphon Break Kit

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST